

GENEVA

DeCon / S

Safety Instructions

Please store this instruction manual for future reference.

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

- **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- **Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take his product for environmental safe recycling.

- No naked flame sources, such as lighted candles, should be placed on the apparatus.

- Do not use this product near water or moisture.

- Clean only with a dry cloth.

- Unplug this product from the wall outlet before cleaning.

 
- Place the unit on a solid surface.

- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through

its ventilation openings.

- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- In the rare event you experience an error, unplug the power cord for 60 seconds and then plug it back in firmly.

Overview

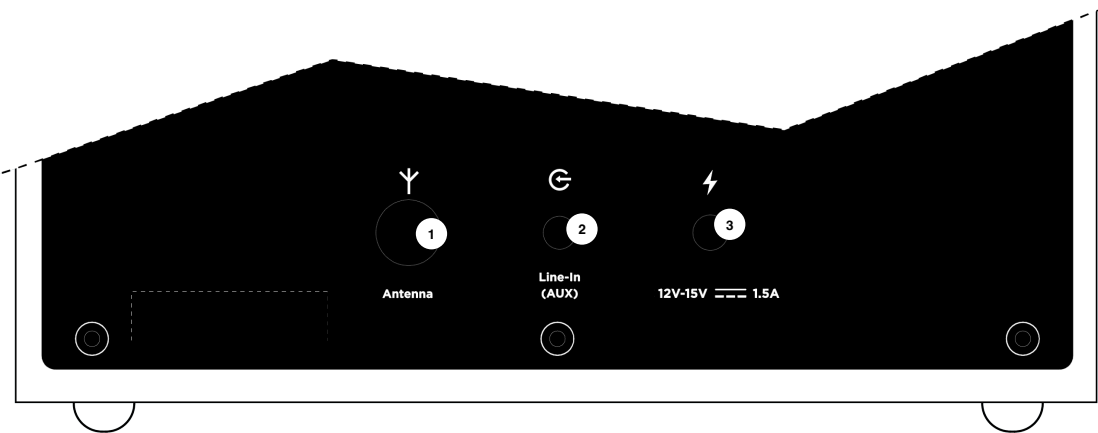

1

ANTENNA

 
Insert the Antenna and extend it to its maximum length to improve FM/DAB reception

2

LINE-IN (AUX)

3

POWER CONNECTOR

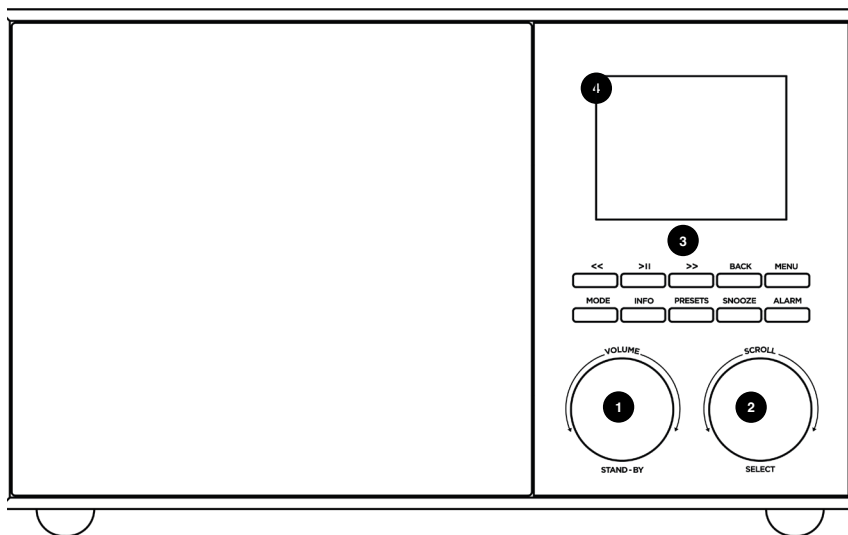

1 **STAND-BY/VOLUME DIAL**
 Press the dial to turn DeCon/S on/off
 Rotate to adjust volume
 Keep pressed to MUTE

2 **SCROLL/SELECT**
 Rotate to scroll menu items
 Press the dial to confirm menu selection

3 **BUTTONS:**

<< Press to select the previous track under Spotify/FM/DAB / Bluetooth mode.

Press and hold to auto-scan the stations under the FM mode

>> Press to select the next track under Spotify/FM/DAB/Bluetooth Mode. Press and hold to auto-scan the stations under the FM mode

> || Press to select Play/Pause under internet radio, Spotify and BT mode. In FM mode, press to do auto scans the stations

MENU Press to enter menu mode. Follow instructions on display to select the desired function

MODE Press to select source

BACK Press to step back while navigating in the menu

PRESETS Press to access presets. Keep pressed to store new presets

INFO Press to toggle informations on the display

ALARM Press to access ALARM menu

SNOOZE Press to snooze the alarm

4 **DeCon/S Display**

First steps with DeCon/S

Insert the power cord on the backside.

Insert the telescopic antenna and extract it in its full length for better FM/DAB reception

Press the POWER button once to begin start-up process.

MENU BUTTON

Pressing the button will take you to the Mode Menu for the particular mode of operation you are in. For example, pressing MENU button when in DAB Mode will take you to the DAB MODE MENU. Pressing the button for a second time will return you to the 'playing screen' that you just left.

NAVIGATING THE MENU

Most of the functions of DeCon/S can be accessed via MENU button

MENU button displays different contents, depending on the current selected mode.

Follow instructions on the display, and:

- use SCROLL/OK dial to select and confirm
- BACK to step back in the menu tree
- press MENU to exit menu
- press MODE to select modes

During playback, press SCROLL/OK dial to display current mode additional informations

PRESETS

PRESETS button is used to conveniently store and recall your favourites. It works:

- in FM mode
- in DAB mode
- In INTERNET RADIO mode
- in SPOTIFY mode

NOTE: Podcasts can be stored when in INTERNET RADIO presets list

In order to save a preset:

- keep PRESETS button pressed
- select preset position on the list with the SCROLL/OK dial
- press SCROLL/OK dial to confirm

to recall presets:

- press PRESET button
- select preset with the SCROLL/OK dial
- press SCROLL/OK dial to confirm

UNDOK

You can control DeCon/S with your smartphone using UNDOK, available for Apple and Google devices.

NOTE: your smartphone and DeCon/S must run under the same Wi-Fi network to work correctly.

Internet Setup

USING THE INTERNET RADIO SETUP WIZARD

The first time you use DeCon/S, you will be asked whether you would like to run the SETUP WIZARD. The 'WIZARD' will run through a series of questions, and is the simplest way to get internet radio up and running on your device.

 


You can run the SETUP WIZARD again at any time, it can be found under the NETWORK heading, in the SYSTEM SETTINGS MENU.

To set up your DeCon/S for online operation using the INTERNET WIZARD, follow these steps:

Press the SELECT button, and start the SETUP WIZARD procedure.


1. Choose and select your preferred hour format (12 or 24 hour).
2. Choose and select UPDATE FROM NETWORK.
3. Scroll and select your local timezone from the menu.
4. Choose and select your preferred daylight savings status.
5. Scroll and select your Wlan region.
6. Scroll and select your NETWORK. In some cases your DeCon/S may find more than one. Simply choose the one you want to use.
7. If your wireless network is not password protected, DeCon/S will automatically connect, and the following screen will be displayed:

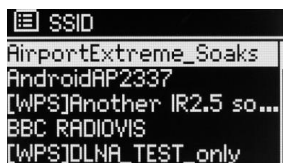

Available networks list



 Password

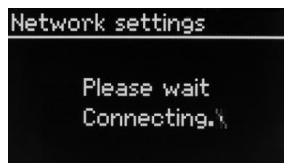

Connection attempt

8. If you do use password protection, enter your network password using the joystick controller to scroll through the alphanumeric characters, pressing SELECT to enter each number or letter. When you have correctly entered your entire password, select OK. Select BKSP (back space) if you have entered an incorrect character. DeCon/S will save the password into its memory. There will be no need to re-enter the password again.

Sources (mode)

DeCon/S can play different sources:

FM, DAB, AUX, BLUETOOTH, INTERNET RADIO, SPOTIFY, PODCASTS

Press MODE to display sources list and press OK dial to select.

FM

When listening to FM radio, DeCon/S displays the station name and other RDS/RBDS informations when available.

CHANGE STATION

Press << or >> to automatically tune to the next available FM station. Scroll/OK dial can be used to fine-tune the station.

SCAN SETTING

You can change the scan settings to only stop at stations with a strong signal by selecting MENU/SCAN SETTING/STRONG STATIONS ONLY.

PROGRAM INFORMATION

Choose what to display by selecting MENU/info

PRESETS

Keep pressed PRESETS button to access presets list and save your favourite stations
To recall a preset, press PRESETS button and select your favourite station

MONO

As an FM signal becomes weaker, the level of hiss can increase. To reduce it, select Menu/Mono

DAB

When listening to DAB radio, DeCon/S displays the station name and other DLS informations

The first time you select DAB Radio, DeCon/S performs an auto-scan of available stations.

CHANGE STATION

Press << or >> to automatically tune to the next available DAB station. SCROLL/OK dial can be used to list all available stations. Highlight the station you wish to listen and press the SCROLL/OK dial to confirm.

PROGRAM INFORMATION

Choose what to display by selecting MENU/INFO

PRESETS

Keep pressed PRESETS button to access presets list and save your favourite stations
To recall a preset, press PRESETS button and select your favourite station

STATION ORDER

The DAB station list can be ordered by Alphanumeric, Ensemble or Valid.
To change station order, select MENU/STATION ORDER and make your selection.

STATION SCAN

We recommend to perform a full scan from time to time to discover new stations. Press the MENU button and select SCAN to perform the scan.

Internet Radio

DeCon/S can play thousands of Internet Radio stations and Podcasts (Internet connection is required)

Press MENU button and select STATION LIST to view all stations divided by location, Genre, etc

Presets can be saved same as for FM and DAB stations

Bluetooth

DeCon/S can connect to Bluetooth devices and stream in CD quality.

As soon as you switch to Bluetooth, DeCon/S attempts to connect to the last device it was paired with. If it is the first time, DeCon/S displays “Awaiting connection”: check your Bluetooth device setting page and select “DeCon/S” in the available devices list.

To connect a new device, press MENU button > CONNECT DEVICE. You can pair up to 7 devices.

Use buttons on DeCon/S to perform basic functions like pause, next track, stop, etc.

Please refer to your Bluetooth device to start playing music on DeCon/S

Line-In / Aux

DeCon/S accepts analogue audio sources, using a mini jack connector. For best performance, we recommend to balance the volume level on your device. Line input level can be adjusted by pressing MENU button > Input level, between -3dB to +18dB



Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

The Spotify software is subject to third party license found here: <http://www.spotify.com/connect/third-party-license>

Additional Functions

EQUALIZER

Press MENU > SYSTEM SETTING > EQUALIZER and pick your favourite EQ setting. DeCon/S can also store Bass/Treble combination. Select “MY EQ Settings” and adjust settings at your preference.

ALARM

DeCon/S can store 2 independent alarms. Press MENU Button > MAIN MENU > ALARMS and follow instructions on the display. You can also use “alarm” button on the front panel.

SLEEP

DeCon/S can set a 15-30-45-60-75-90 minutes sleep timer. Press MENU Button MAIN MENU > SLEEP and follow the instructions on the display.

FIRMWARE UPDATE

Press MENU > SYSTEM SETTINGS > FIRMWARE UPGRADE and confirm with the SCROLL/OK dial

FACTORY RESET

Press MENU > SYSTEM SETTINGS > FACTORY reset and confirm with the SCROLL/OK dial

Troubleshooting / Errors Messages

Problem	Cause	Solution
FM: HISS DAB: Burlbling/Intermittent Cut-Out	Low signal strength	Check/move antenna Move DeCon/S Rescan local (high-strength) stations only
DAB: 'No stations available' message	Low signal strength	As above then rescan stations.
Cannot connect to network	Network down	Check that network is working between a computer and the router
	Router restricts access to listed MAC addresses	Obtain the DeCon/SAC address from MENU > SYSTEM SETTINGS > NETWORK > VIEW SETTINGS and add to router list.
	Insufficient Wi-Fi signal strength	Check distance to router; see if a computer can connect to the network in this location
	Unusual network configuration	Setup network manually through MENU > SYSTEM SETTINGS > NETWORK > MANUAL SETTINGS
	Firewall preventing access	Check the following ports are open on the router: UDP and TCP ports 80 and 123; DNS port 53. Windows shares: ports 135 – 139 and 445.
Cannot connect to Internet	Internet connection down	Check that Internet is working for a computer connected to the same network
	Firewall preventing access	Check the following ports are open: UDP and TCP ports 80 and 123; DNS port 53. Some Internet radio stations may require additional ports to be opened.

Cannot play particular Internet radio station

Station not broadcasting, overloaded or insufficient bandwidth.
Station broadcasting using unknown codec.
Link out of date.

Try other stations; try listening on computer via Internet radio portal website; try later.

Bluetooth Mode: Can't connect to a paired device

Select BT DISCONNECT from the Bluetooth Menu and delete DeCon/S's profile from your Bluetooth device, then re-pair the devices as normal

Bluetooth Mode: Poor audio quality

- Your Bluetooth device may be out of range
- Electromagnetic interference

Move your Bluetooth device closer to DeCon/S.
Move your Bluetooth device away from other sources of interference such as other Bluetooth devices, wireless routers etc.

Message

Description

Example

Failed to connect

Correct key entered, but router rejects request.

MAC filtering enabled on router.

Network error

Problem past router - incorrect data being received from network.

Data obtained from server is unreadable.

Service not available (DAB)

No DAB reception.

Update failed

Software upgrade failed.

Network not ready

problem with connection to router.

Router switched off.

Technical Information

Model: DeCon/S

Type: WiFi/Spotify/Internet Radio/DAB/DAB+/FM/AUX/Bluetooth Smart Radio

Power Supply: 12-15V DC power adapter

Dimension (mm): 225W x 130H x 130D

Weight: 1.68 KG

Specifications are subject to change without notice

Product disposal instructions (weee directive)



The symbol shown here and on the product means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

For more information please contact your local authority or the retailer where the product was purchased.

www.genevalab.com